

MaxxFan™ 4– Key Wall Control Operating Guide

The Customer Service Phone Number for MaxxAir is 800-780-9893, e-mail is custservice@maxxair.com

MaxxFan™ 4-Key Wall Control Model Series 03500K

For use with MaxxFan Deluxe models 7000K thru 8501K & MaxxFan™ Standard models 4500K thru 4801K



Wall Control Features

- Controls all fan functions from one convenient wall location
- Turn Fan On or Off
- 10 Fan Speeds available
- Opens and Closes Vent Lid
- Easy access to Ceiling Fan Mode
- Select Fan Intake or Exhaust
- Keypad controls at ceiling remain active

Fan ON / OFF	Turns Fan Motor On or OFF. Vent Lid will automatically open when fan is turned on and close when fan is turned off.
Vent OPEN / CLOSE	Opens and Closes the motorized Vent Lid. Allows the vent lid to be open or closed with the fan motor on or off.
Fan SPEED	Adjusts the Fan Motor to any of 10 speeds. Speed 1 is the lowest and speed 10 is the highest. When speed 10 is reached the fan motor will cycle back to speed 1.
Air IN / OUT	Reverses Fan Motor for either Intake or Exhaust air direction



www.maxxair.com

1.800.780.9893

MaxxFan™ 4-Key Wall Control Installation Guide


The Customer Service Phone Number for MaxxAir is 800-780-9893, e-mail is custservice@maxxair.com

MaxxFan™ 4-Key Wall Control Model Series 03500K


For use with MaxxFan Deluxe models 7000K thru 8501K & MaxxFan™ Standard models 4500K thru 4801K



Step1. Cut a 1 1/2" x 1 7/8" rectangular hole in the wall where you wish to mount the 4-Key Wall Control. Attach Back Plate to wall with appropriate screws for wall construction.

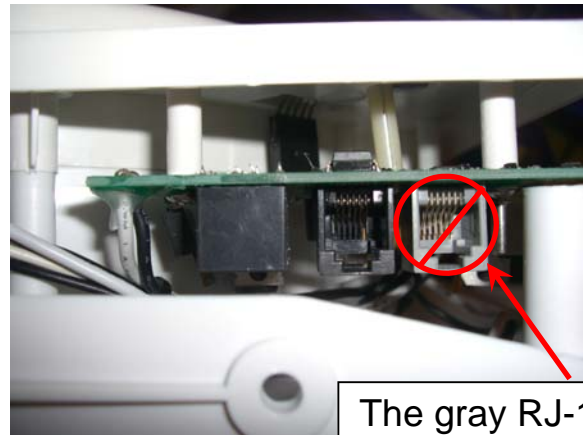

The gray RJ-11 jack is for other controls

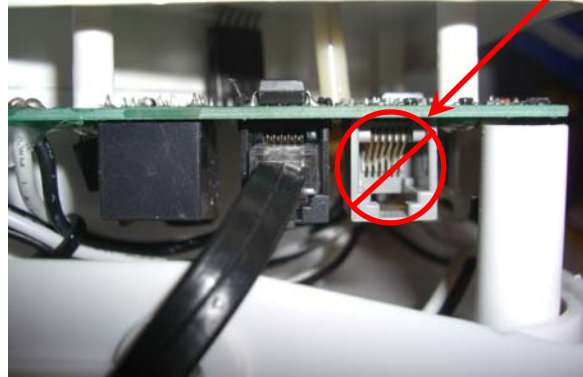

Step2. Plug one end of RJ-11 cable into BLACK RJ-11 jack on MaxxFan PCB (at ceiling)
(The gray RJ-11 jack is for other controls).
Route RJ-11 cable thru wall to hole cut in step 1.



Step 3. Plug end of RJ-11 cable into RJ-11 jack on 4-Key Wall Control PCB.
(Either RJ-11 jack may be used, they are identical)



Step4. Snap Bezel onto Wall Control.